



Project status visualization (4D)	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Task manager	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Organizer	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓4
External editors											
Symbol Editor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Template Editor	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Drawings, plans and reports											
Drawing layout editor	✓	✓	✓	✓	✓	✓		✓			✓
Creating general arrangement drawings (plan, section, erection)	✓	✓	✓	✓	✓	✓		✓			✓
Modifying general arrangement drawings (plan, section, erection)	✓	✓	✓	✓	✓	✓		✓			✓
Creating steel fabrication drawings (single-part drawings)	✓	✓						✓			✓
Modifying steel fabrication drawings (single-part drawings)	✓	✓						✓			✓
Creating steel fabrication drawings (assembly drawings)	✓	✓						✓			✓
Modifying steel fabrication drawings (assembly drawings)	✓	✓						✓			✓
Creating precast concrete drawings (cast unit drawings)	✓		✓					✓			✓
Modifying precast concrete drawings (cast unit drawings)	✓		✓					✓			✓
Creating cast-in-place concrete drawings (cast unit drawings)	✓		✓	✓				✓			✓
Modifying cast-in-place concrete drawings (cast unit drawings)	✓		✓	✓				✓			✓



Layout manager	✓	✓	✓	✓	✓	✓	✓	✓			
Analyzing											
Create analysis model	✓	✓	✓	✓	✓			✓			
Analysis and Design interface	✓	✓	✓	✓	✓			✓			
Loads	✓	✓	✓	✓	✓			✓			
Open API											
Open API capabilities	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓4

✓1 = Limitation: 2500 parts, 5000 reinforcement objects, unlimited number of bolts.

✓2 = Pours are enabled by an advanced option.

✓3 = Numbering is limited to cast-in-place parts, cast units and reinforcement.

✓4 = View only.

✓5 = Cast in Place concrete components only.

✓6 = Numbering is limited to steel parts and cast units.

✓7 = User-defined attributes in drawing properties can be edited, others view only.

✓8 = Conceptual components only.

✓9 = User-defined attributes that affect numbering cannot be edited.

✓10 = Availability depends on the extension, check the Tekla Warehouse page for details.